


Manual

Water Pressure Booster Pump

1/3 Hp
Power

Applies for:

Model	Code
PRE-1/3	14637

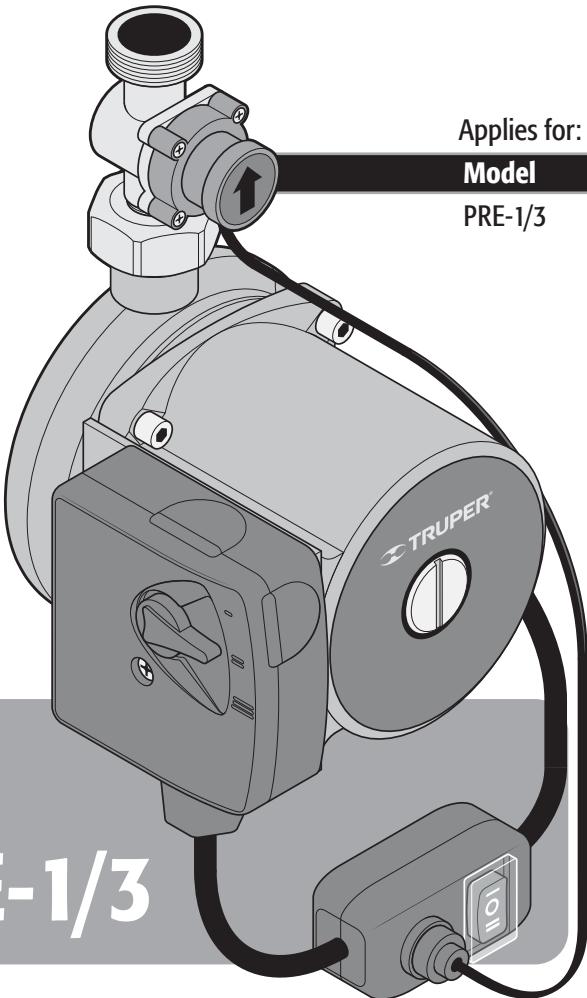

PRE-1/3

CAUTION



Read this manual thoroughly
before using the tool.




Technical Data.....	3
Power Requirements.....	3
 General Power Tool Safety Warnings.....	4
 Safety Warnings for Water Pressure Pumps.....	5
Parts.....	6
Installation.....	6
Start Up.....	8
Maintenance.....	9
Troubleshooting.....	9
Notes.....	10
Authorized Service Centers.....	11
Warranty Policy.....	12

CAUTION

To gain the best performance of the tool, prolong the duty life, make the Warranty valid if necessary, and to avoid hazards of fatal injuries please read and understand this Manual before using the tool.

Keep this manual for future references.

The illustrations in this manual are for reference only. They might be different from the real tool.

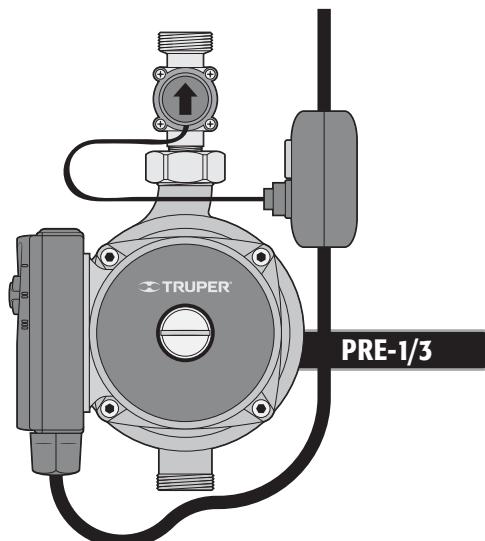

PRE-1/3

Code	•	14637
Description	•	Water Pressure Booster Pump
Voltage	•	127 V ~
Frequency	•	60 Hz
Current	•	2 A
Speed	•	3 600 RPM
Power	•	1/3 Hp
Inlet and Outlet Diameter	•	3/4 NPT
Minimum Inlet Pressure	•	0,72 PSI
Maximum Inlet Pressure	•	145 PSI
Conductors	•	20 AWG x 3C with 221 °F insulation temperature
Work Cycle	•	50 minutes work per 20 minutes rest. Maximum 6 hours daily
Insulation	•	Class I
IP Grade	•	IP44

Power cord grips: Type "Y".
Tool Build quality: Basic Insulation
Thermal insulation on motor winding: Class F

WARNING Avoid the risk of electric shock or severe injury. When the power cable gets damaged it should only be replaced by the manufacturer or at a **TRUPER** Authorized Service Center. The build quality of the electric insulation is altered if spills or liquid gets into the tool while in use. Do not expose to rain, liquids and/or dampness.

WARNING Before gaining access to the terminals all power sources should be disconnected.



Power requirements


WARNING The tool shall be connected to ground while in use to prevent electrical shock.



• Plug in the socket into a properly grounded power outlet as shown in example **A**. Not all the power outlets are properly grounded. If in doubt, verify with a qualified electrician.

• If the power outlet is a two-pole (two orifices), BY NO MEANS REMOVE OR MODIFY THE GROUND CONDUCTOR OF THE PLUG. Use a temporary adapter as shown in example **B**. Always connect the conductor ring as indicated.

CAUTION When using an extension cable, verify the gauge is enough for the power that your product needs. A lower gauge cable will cause voltage drop in the line, resulting in power loss and overheating. The following table shows the right size to use depending on cable's length and the ampere capability shown in the tool's nameplate. When in doubt use the next higher gauge

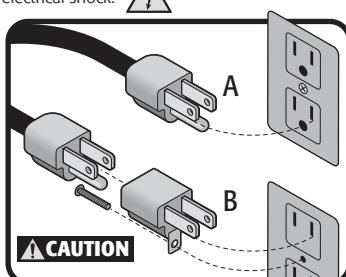

Amperage Capacity	Number of Conductors	Extension gauge
from 0 A and up to 10 A		from 6 ft to 49 ft higher than 49 ft
from 10 A and up to 13 A		18 AWG(*) 16 AWG
from 13 A and up to 15 A		16 AWG 14 AWG
from 15 A and up to 20 A	3 (one grounded)	14 AWG 12 AWG
		8 AWG 6 AWG

WARNING When using power tools outdoors, use a **VOLTECK** grounded extension cable labeled "Outdoors Use". These extensions are especially designed for outdoors and reduce the risk of electric shock.



WARNING All the cabling, electric connections and the ground connection in the system shall comply with the **OFFICIAL MEXICAN STANDARD NOM-001-SEDE, ELECTRIC INSTALLATIONS (USE)** or with the local codes and ordinances. Please employ a qualified electrician.

⚠️ WARNING! Read carefully all safety warnings and instructions listed below. Failure to comply with any of these warnings may result in electric shock, fire and / or severe damage. Save all warnings and instructions for future references.

Work area**Keep your work area clean, and well lit.**

Cluttered and dark areas may cause accidents.

**Never use the tool in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.**

Sparks generated by power tools may ignite the flammable material.

**Keep children and bystanders at a safe distance while operating the tool.**

Distractions may cause loss of control.

**Electrical Safety****The tool plug must match the power outlet. Never modify the plug in any way. Do not use any adapter plugs with grounded power tools.**

Modified plugs and different power outlets increase the risk of electric shock.

**Avoid body contact with grounded surfaces, such as pipes, radiators, electric ranges and refrigerators.**

The risk of electric shock increases if your body is grounded.

Do not expose the tool to rain or wet conditions.

Water entering into the tool increases the risk of electric shock.

Do not force the cord. Never use the cord to carry, lift or unplug the tool. Keep the cord away from heat, oil, sharp edges or moving parts.

Damaged or entangled cords increase the risk of electric shock.

When operating a tool outdoors, use an extension cord suitable for outdoor use.

Using an adequate outdoor extension cord reduces the risk of electric shock.

If operating the tool in a damp location cannot be avoided, use a ground fault circuit interrupter (GFCI) protected supply.

Using a GFCI reduces the risk of electric shock.

Personal safety**Stay alert, watch what you are doing and use common sense when operating a tool. Do not use a power tool while you are tired or under the influence of drugs, alcohol or medication.**

A moment of distraction while operating the tool may result in personal injury.

Use personal protective equipment. Always wear eye protection.

Protective equipment such as safety glasses, anti-dust mask, non-skid shoes, hard hats and hearing protection used in the right conditions significantly reduce personal injury.

**Prevent unintentional starting up. Ensure the switch is in the "OFF" position before connecting into the power source and / or battery as well as when carrying the tool.**

Transporting power tools with the finger on the switch or connecting power tools with the switch in the "ON" position may cause accidents.

Remove any wrench or vice before turning the power tool on.

Wrenches or vices left attached to rotating parts of the tool may result in personal injury.

Do not overreach. Keep proper footing and balance at all times.

This enables a better control on the tool during unexpected situations.

Dress properly. Do not wear loose clothing or jewelry. Keep hair, clothes and gloves away from the moving parts.

Loose clothes or long hair may get caught in moving parts.

**If you have dust extraction and collection devices connected onto the tool, inspect their connections and use them correctly.**

Using these devices reduce dust-related risks.

Power Tools Use and Care**Do not force the tool. Use the adequate tool for your application.**

The correct tool delivers a better and safer job at the rate for which it was designed.

Do not use the tool if the switch is not working properly.

Any power tool that cannot be turned ON or OFF is dangerous and should be repaired before operating.

Disconnect the tool from the power source and / or battery before making any adjustments, changing accessories or storing.

These measures reduce the risk of accidentally starting the tool.

Store tools out of the reach of children. Do not allow persons that are not familiar with the tool or its instructions to operate the tool.

Power tools are dangerous in the hands of untrained users.

Service the tool. Check the mobile parts are not misaligned or stuck. There should not be broken parts or other conditions that may affect its operation. Repair any damage before using the tool.

Most accidents are caused due to poor maintenance to the tools.

**Keep the cutting accessories sharp and clean.**

Cutting accessories in good working conditions are less likely to bind and are easier to control.

Use the tool, components and accessories in accordance with these instructions and the projected way to use it for the type of tool when in adequate working conditions.

Using the tool for applications different from those it was designed for, could result in a hazardous situation.

Service**Repair the tool in a TRUPER® Authorized Service Center using only identical spare parts.**

This will ensure that the safety of the power tool is maintained.

**Children or people with reduced physical, sensory or mental capabilities shall not operate the tool, neither inexperienced people or without knowledge in the use of the tool, unless supervised by a person responsible of their safety or if receiving previous instructions about the tool operation.**

Children shall be kept under supervision to double-check they will not play with the tool. Tight supervision shall be used with children or disabled persons to prevent from using or being close to any household tool.



Safety Warnings for Water Pressure Pumps

 TRUPER®

- The automatic pressure pump is built with a noiseless power motor totally coated with rotating parts generating pressure in domestic clean water pipes. The pump doesn't overloads when full and requires little maintenance.

- It is mainly used to pressurize domestic use water to the water heater and for sun heated water.

⚠ CAUTION • The water to be pumped shall be clean, with no solid particles, fibers or mineral or explosive liquids.

- The pump may be used in warm regions where the water entering into the line can be very hot (the pump is designed to support up to 176 °F).

⚠ CAUTION • Before setting up the pump double check the pipes system is properly connected and with no obstructions, soldering remains or dirt.

⚠ WARNING • The pump shall be installed in a dry, well ventilated place to prevent electric shock caused by water, spills or condensation. If the pump is set outdoors it will need a protective cover.

⚠ WARNING • Do not install the pump inside the bathroom because mist can enter into the connections box.

⚠ WARNING • Do not allow the pump's electric parts be in contact with water.

- A recommendation to facilitate maintenance. Set up an independent shut-off valve system in the pump water inlet and outlet, a filter in the inlet pipes and a valve with automatic air release if there is a possibility that air bubbles build into the pipes.


- If the pump is not used long periods of time close the inlet valve and cut the power supply.


- Temperature in the system shall not be higher than environment temperature to prevent a short circuit caused by humidity condensation in the pump body.

- If the environment temperature is below 32 °F discharge all the water from the pipes to prevent freeze related cracks.

⚠ CAUTION • To prevent overheating stop the pump immediately if there are particles, incrustation, obstruction or any type of dirt present.

- The information labels adhered to the device shall not be removed or covered. All the information about the device that is no longer legible shall be replaced immediately.


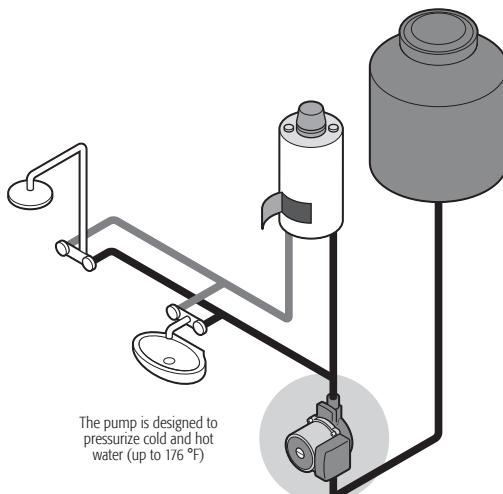


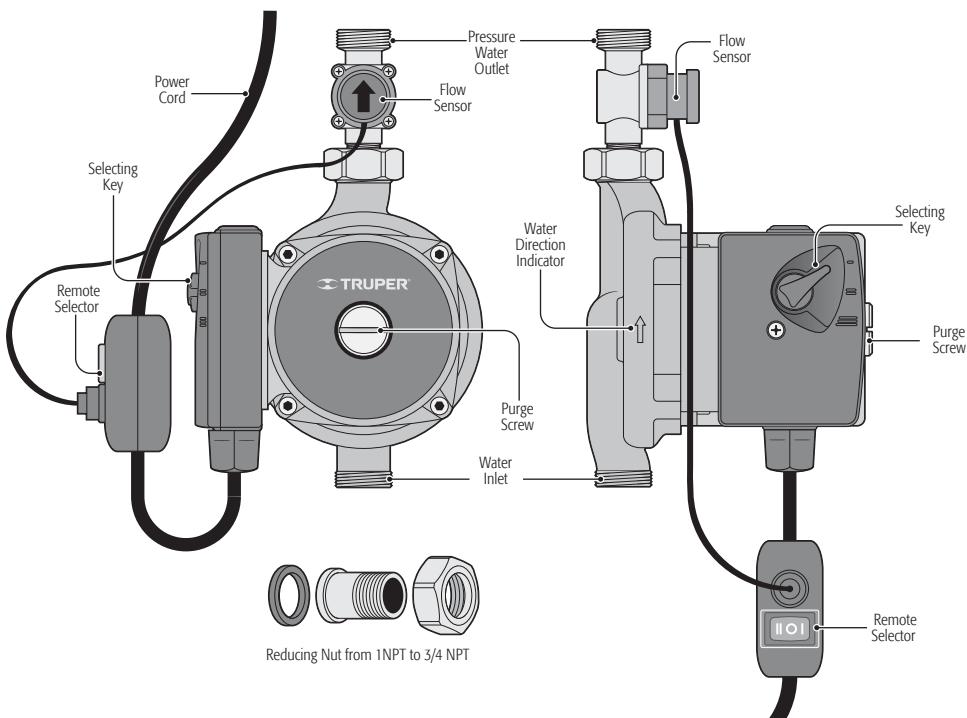

Installation


CAUTION • When installing the pump do not overlook setting it with the motor axis in a horizontal position.

CAUTION • The direction of the flow should follow the direction indicated by the arrow marked in the pump body.

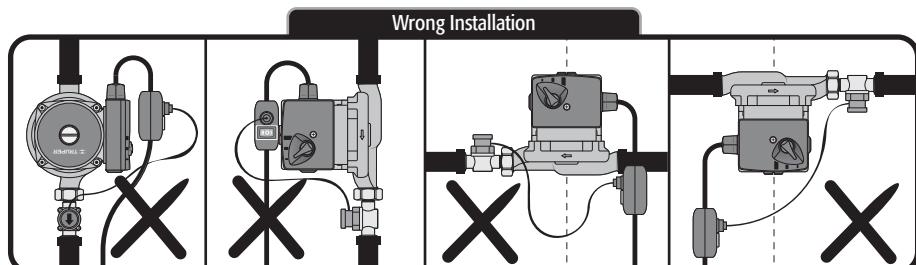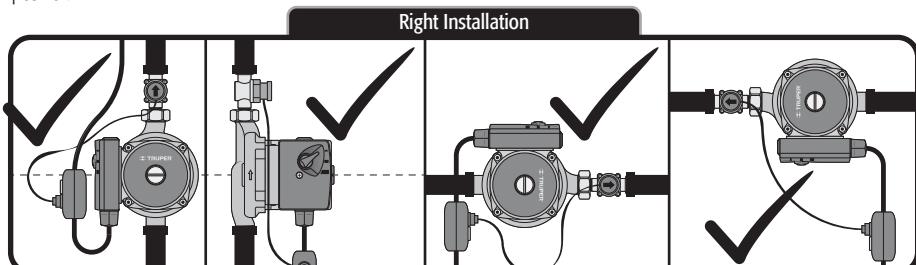


Installation

 **TRUPER®**

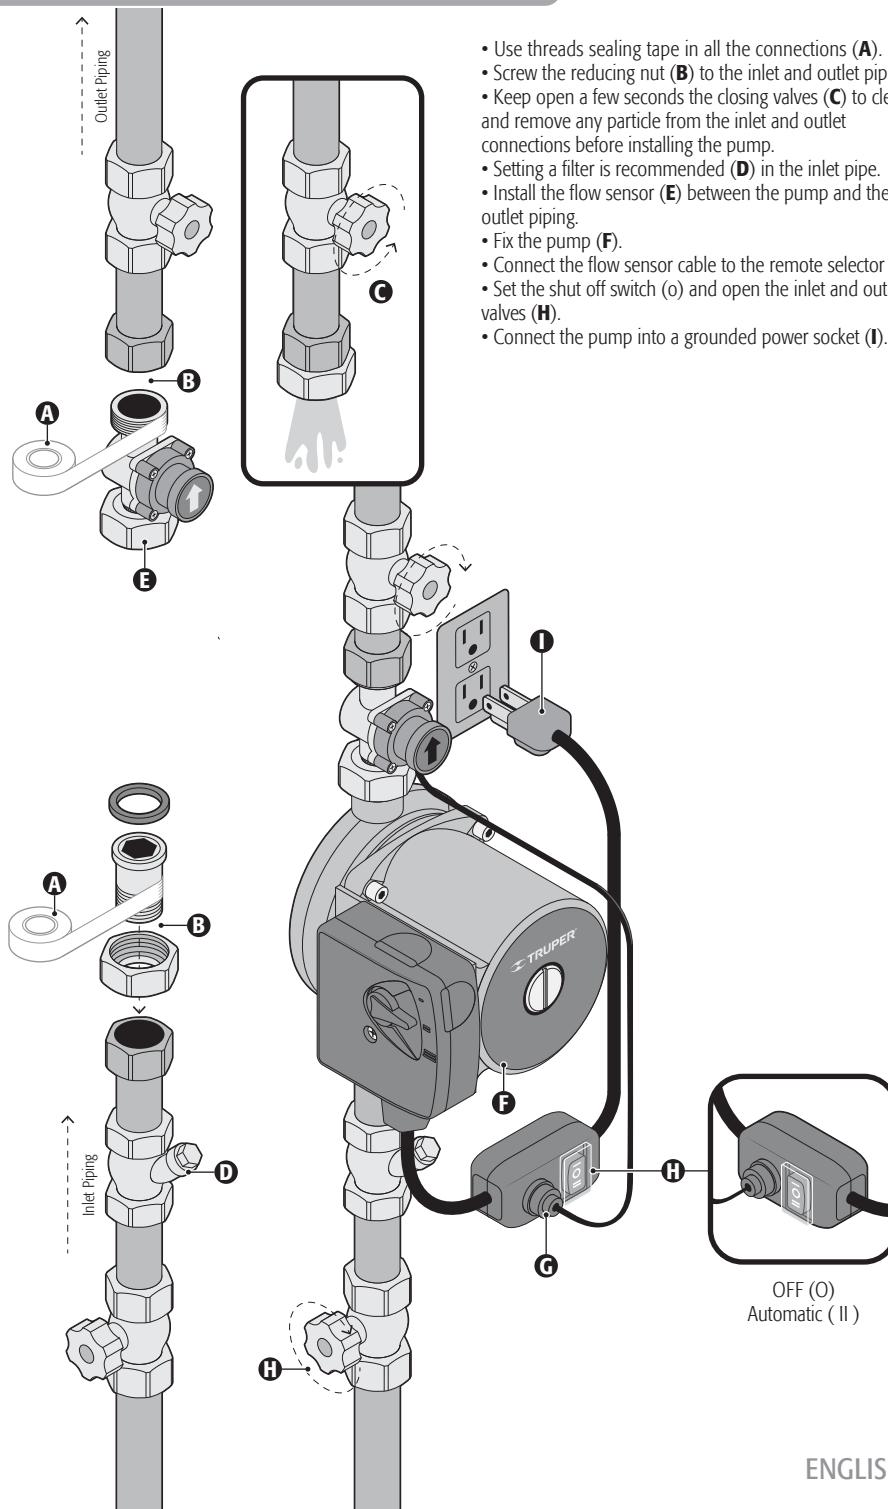

Air Purging

- For the pump to run correctly after being installed or after maintenance, discharge the air from inside the pump before starting it.
 - Open the water faucet after installing the pump (see page 7).
 - Set a screwdriver tip in the purge screw slot.
 - Turn the purge screw to remove it and let air come out until water starts to flow.
 - Set and screw back the purge screw.
- CAUTION** To prevent an electric fault do not allow water entering the connections box or the plug.

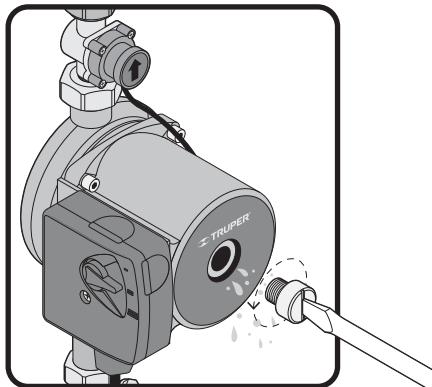


Start Up

- Use the remote selector to operate the pump. There are three positions:
- Off: The pump motor stops.
- Automatic: The pump starts when the water faucet is opened.
- Manual: The pump is running constantly.
- Using the height selector key set up the required height.

CAUTION • When selecting the automatic speed mode, the flow speed shall be higher than 0.4 gal/min. Otherwise the pump will not start.

CAUTION • When selecting the manual mode there should be at least one faucet open. Otherwise the pumped liquid will be too hot and the pump may get damaged.

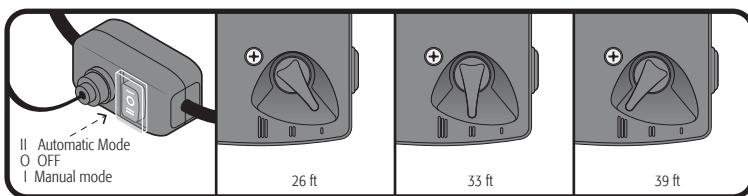

Cleaning and Care

- Inspect regularly all the mounting screws and double check they are correctly tightened. If any of the screws is loose, tighten immediately.

Repairs

- Repairs to the equipment shall only be carried out in a  **TRUPER®** Authorized Service Center
- Service and maintenance carried out by non-qualified persons may be dangerous and could cause personal injuries and makes the product warranty void.

Troubleshooting

Problem

The pump is not running.

Cause

- The pump is off.
- Problems in the power supply.
- The motor axis is stuck.

Solution

- Set the pump automatic selector in automatic mode (II) or manual (I).
- Check the fuses and power line.
- Remove the purge screw and turn the axis with a screwdriver.

The pump is making noise.

- There is air in the system or in the pump.

- Run the pump some minutes with the faucet opened and discharge air.

The pump does not stop when the faucet is closed.

- The pump remote selector is in manual mode.
- The flow sensor is dirty.

- Change to off mode (I) or automatic (II) mode.
- Open the valve.

The pump is functioning but is not generating pressure.

- The valve is closed.
- There is air in the pipe or the pump.
- The pump is dirty. The flow sensor is blocked with foreign objects.

- Open the valve.
- Run the pump a few minutes with an open faucet and discharge air.
- Go to a  **TRUPER®** Authorized Service Center.

If the problems persist despite carrying out the recommended corrective actions, contact a  **TRUPER®** Authorized Service Center.

Authorized Service Centers



In the event of any problem contacting a Service Center, please see our webpage www.truper.com to get an updated list, or call our toll-free numbers 01(800) 690-6990 or 01 (800) 018-7873 to get information about the nearest **TRUPER®** Authorized Service Center.

AGUASCALIENTES	DE TODO PARA LA CONSTRUCCIÓN GRAL. BARRAGÁN #1201, COL. GREMIAL, C.P. 20030, AGUASCALIENTES, AGS. TEL.: 01 (449) 994 0537	NUEVO LEÓN	SUCURSAL MONTERREY AV. STIVA #275, PARQUE INDUSTRIAL STIVA BARRAGÁN, SAN NICOLAS DE LOS GARZA, C.P. 66420, MONTERREY, N.L. TEL.: 01 (81) 8352 8791 / 01 (81) 8352 8790
BAJA CALIFORNIA	SUCURSAL TIJUANA AV. LA ENCANTADA, LOTE #5, PARQUE INDUSTRIAL EL FLORIDO II, C.P. 22244, TIJUANA, B.C. TEL.: 01 (664) 969 5100	OAXACA	FIX FERRETERÍAS AV. 20 DE NOVIEMBRE #910, COL. CENTRO, C.P. 68300, TUXTEPEC, OAX. TEL.: 01 (287) 106 3092
BAJA CALIFORNIA SUR	FIX FERRETERÍAS FELIPE ÁNGELES ESQ. RUIZ CORTÍNEZ S/N, COL. PUEBLO NUEVO, C.P. 23670, CD. CONSTITUCIÓN, B.C.S. TEL.: 01 (613) 132 1115	PUEBLA	SUCURSAL PUEBLA AV. PERIFÉRICO #2-A, SAN LORENZO ALMECATLA, C.P. 72710, CUAUTLACINGO, PUE. TEL.: 01 (222) 282 8282 / 84 / 85 / 86
CAMPECHE	TORNILLERÍA Y FERRETERÍA AAA AV. ALVARO OBREGÓN #524, COL. ESPERANZA C.P. 24080 CAMPECHE, CAMP. TEL.: 01 (981) 815 2808	QUERÉTARO	ARU HERRAMIENTAS S.A. DE C.V. AV. PUERTO DE VERACRUZ #110, COL. RANCHO DE ENMEDIO, C.P. 76842, SAN JUAN DEL RÍO, QRO. TEL.: (427) 268 4544
CHIAPAS	FIX FERRETERÍAS AV. CENTRAL SUR #27, COL. CENTRO, C.P. 30700, TAPACHULA, CHIS. TEL.: 01 (962) 118 4083	QUINTANA ROO	FIX FERRETERÍAS CARRETERA FEDERAL MZ. 46 LT. 3 LOCAL 2, COL. EJIDAL, C.P. 77710 PLAYA DEL CARMEN, Q.R. TEL.: 01 (984) 267 3140
CHIHUAHUA	SUCURSAL CHIHUAHUA AV. SILVESTRE TERRAZAS #128-11, PARQUE INDUSTRIAL BAFAR, CARRETERA MÉXICO CUAUHTÉMOC, C.P. 31415, CHIHUAHUA, CHIH. TEL. 01 (614) 434 0052	SAN LUIS POTOSÍ	FIX FERRETERÍAS AV. UNIVERSIDAD #1850, COL. EL PASEO, C.P. 78320, SAN LUIS POTOSÍ, S.L.P. TEL.: 01 (444) 822 4341
MÉXICO CITY	FIX FERRETERÍAS EL MONSTRUO DE CORREGIDORA, CORREGIDORA # 22, COL. CENTRO, C.P. 06060, CUAUHTÉMOC, CDMX. TEL: 01 (55) 5522 5031 / 5522 4861	SINALOA	SUCURSAL CULIACÁN AV. JESÚS KUMATE SUR #4301, COL. HACIENDA DE LA MORA, C.P. 80143, CULIACÁN, SIN. TEL.: 01 (667) 173 9139 / 173 8400
COAHUILA	SUCURSAL TORREÓN CALLE METAL MECÁNICA #280, PARQUE INDUSTRIAL ORIENTE, C.P. 27278, TORREÓN, COAH. TEL.: 01 (871) 209 68 23	SONORA	FIX FERRETERÍAS CALLE 5 DE FEBRERO #517, SUR LT. 25 MZ. 10, COL. CENTRO, C.P. 85000, CD. OBREGÓN, SON. TEL.: 01 (644) 413 2392
COLIMA	BOMBAS Y MOTORES BYMTESA DE MANZANILLO BLVD. MIGUEL DE LA MADRID #190, COL. 16 DE SEPTIEMBRE, C.P. 28239, MANZANILLO, COL. TEL.: 01 (314) 332 1986 / 332 8013	TABASCO	SUCURSAL VILLAHERMOSA CALLE HELIO LOTES 1, 2 Y 3 MZ. #1, COL. INDUSTRIAL, 2A ETAPA, C.P. 86010, VILLAHERMOSA, TAB. TEL.: 01 (995) 353 7244
DURANGO	TORNILLOS ÁGUILA, S.A. DE C.V. MAZURIÓ #200, COL. LUIS ECHEVERRÍA, DURANGO, DGO.TEL.: 01 (618) 817 1946 / 01 (618) 818 2844	TAMAULIPAS	VM ORINGS Y REFACCIONES CALLE ROSITA #527 ENTRE 20 DE NOVIEMBRE Y GRAL. RODRÍGUEZ, FRACC. REYNOSA, C.P. 88780, REYNOSA, TAMS. TEL.: 01 (899) 792 7552
ESTADO DE MÉXICO	SUCURSAL CENTRO JILOTEPEC AV. PARQUE INDUSTRIAL #1-A, JILOTEPEC, C.P. 54240, JILOTEPEC, EDO. DE MÉX. TEL.: 01 (761) 782 9101 EXT. 5728 Y 5102	TLAXCALA	SERVICIOS Y HERRAMIENTAS INDUSTRIALES PABLO SIDAR #152, COL . BARRIO DE SAN BARTOLOMÉ, C.P. 90970, SAN PABLO DEL MONTE, TLAX. TEL.: 01 (222) 271 7502
GUANAJUATO	CÍA. FERRETERA NUEVO MUNDO S.A. DE C.V. AV. MÉXICO - JAPÓN #225, CD. INDUSTRIAL, C.P. 38010, CELAYA, GTO. TEL.: 01 (461) 617 7578 / 79 / 80 / 88	VERACRUZ	LA CASA DISTRIBUIDORA TRUPER BVD. PRIMAVERA, ESQ. HORTENSIA S/N, COL. PRIMAVERA C.P. 93308, POZA RICA, VER. TEL.: 01 (782) 823 8100 / 826 8484
GUERRERO	CENTRO DE SERVICIO ECLIPSE CALLE PRINCIPAL MZ.1 LT. 1, COL. SANTA FE, C.P. 39010, CHILPANCINGO, GRO. TEL.: (747) 478 5793	YUCATÁN	SUCURSAL MÉRIDA CALLE 33 #600 Y 602, LOCALIDAD ITZINCAB Y MULSAY, MPIO. UMÁN, C.P. 97390, MÉRIDA, YUC. TEL.: 01 (999) 912 2451
HIDALGO	FERREPRECIOS S.A. DE C.V. LIBERTAD ORIENTE #304 LOCAL 30, INTERIOR DE PASAJE ROBLEDO, COL. CENTRO, C.P. 43600, TULANCINGO, HGO. TEL.: 01 (775) 753 6615 / 01 (775) 753 6616		
JALISCO	SUCURSAL GUADALAJARA AV. ADOLFO B. HORN # 6800, COL: SANTA CRUZ DEL VALLE, C.P: 45655, TLAJOMULCO DE ZUÑIGA, JAL. TEL.: 01(33) 3606 5285 AL 90		
MICHOACÁN	FIX FERRETERÍAS AV. PASEO DE LA REPÚBLICA #3140-A, COL. EX-HACIENDA DE LA HUERTA, C.P. 58050, MORELIA, MICH. TEL.: 01 (443) 334 6858		
MORELOS	FIX FERRETERÍAS CAPITÁN ANZURES #95, ESQ. JOSÉ PERDIZ, COL. CENTRO, C.P. 62740, CUAUTLA, MOR. TEL.: 01 (755) 352 8931		
NAYARIT	FERRETERÍAS DE TEPIC MAZATLÁN #117, COL. CENTRO, C.P. 63000, TEPIC, NAY. TEL.: 01 (311) 258 0540		

Model	Code	Brand
PRE-1/3	14637	 TRUPER®

This product, its parts and components have a 1 year warranty against defects in its manufacture, operation and workmanship, except when: the product has been used in conditions other than those recommended, or has not been operated according to the instructions, or has been altered or repaired by personnel not authorized by  **TRUPER®**. In order to make the warranty valid or to purchase components and spare parts, you must present the product and its proof of purchase at Av. San Isidro #110, Col. Industrial San Antonio, ALC. Azcapotzalco, C.P. 02760, CDMX, Mex. or at the store where you bought it, or at a  **TRUPER®** service center listed in the attached warranty policy and/or at www.truper.com. Transportation costs resulting from compliance of this warranty will be covered by  **TRUPER®**. For questions or comments, call 01-800-690-6990.

Imported by: Truper, S.A. de C.V. Parque Industrial #1, Jilotepec, Edo. de Méx., Méx. C.P. 54240.
Made in China.



Stamp of the business:

Delivery date:

Sello del establecimiento comercial:

Fechas de entrega:

AÑO



Este producto, sus piezas y componentes están garantizados por 1 año contra defectos de fabricación,funcionamiento y mano de obra, excepto cuando: el producto haya sido usado en condiciones distintas a las recomendadas, o no se haya operado de acuerdo a las instrucciones, o haya sido alterado o reparado por personal no autorizado por TRUPER. Para hacer valida la garantía o adquirir piezas y componentes debida presentar el producto y su comprobante de compra en Av. San Isidro #110, Col. Industrial San Antonio, Alc. Azcapotzalco, C.P. 02760, CDMX, Mex. o en el establecimiento donde lo compró, o en algún Centro de servicio TRUPER. Los gastos de transportación que resulten para su cumplimiento serán cubiertos por TRUPER. Para dudas o comentarios llame al 01-800-690-6990.

www.truper.com Los gastos de transportación que resulten para su cumplimiento serán cubiertos por TRUPER, S.A. de C.V., Parque Industrial #1, Jiutepec, Edo. de Mex., Mex. C.P. 54240, Hecho en China


Modelo	Código	Marca	14637	PRE-1/3
--------	--------	-------	-------	---------

Póliza de Garantía

TRUPER®


En caso de emergencia, llame al número de teléfono que aparece en el letrero de su puerta. Si no tiene un letrero, llame al teléfono: (800) 09-66-99-06 o (800) 018-78-73 donde le informarán cuál es el Centro de Servicio Autorizado. **TRUPER®** más cerca de usted.

Centros de Servicio Autorizados

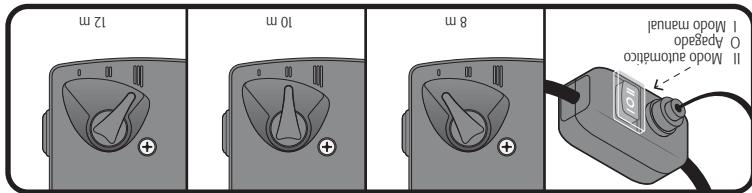

- A ATENCIÓN** • Cuando se seleccione el modo manual debe de haber por lo menos un grifo abierto, de lo contrario la bomba no arrancará.
- A ATENCIÓN** • Cuando se seleccione el modo automático la velocidad del flujo debe ser mayor a 1,5/L/min. De lo contrario el líquido bombeado se calentará demasiado y la bomba podría dañarse.
- Con ayuda de la llave selectora de alturas, configúre la altura requerida.
 - Manual: La bomba está en marcha de forma constante.
 - Automática: La bomba arranca en cuanto se abre el grifo del agua.
 - Apagado: El motor de la bomba se detiene.
 - Utilice el selector remoto para operar la bomba; este tiene tres posiciones:

Puesta en marcha

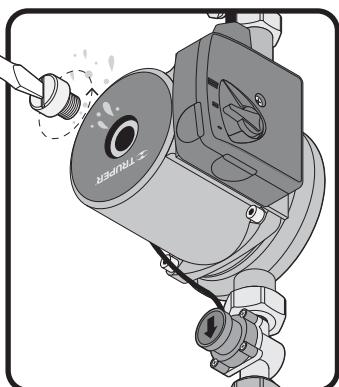




- A ATENCIÓN** No permita que entre agua en la caja de conexiones o en la válvula para no causar una falla eléctrica.
- Utiliza a clic y suelte el tornillo de purga.
 - Gire el tornillo de purga para retirarlo para dejar salir el aire hasta que empiece a salir agua.
 - Coloque la punta de un desarmador en la ranura del tornillo de purga.
 - Coloque la punta de un desarmador en la instalación de la bomba (consulte la figura 7).
 - Abra el grifo de agua después de hacer la instalación de la maniobrero.
 - Se debe descargar el aire del interior de la bomba antes de ponerla en marcha para que ésta funcione correctamente después de instalarla o después de correrán en la bomba.

Purga de aire

Instalación

• TRUPER®

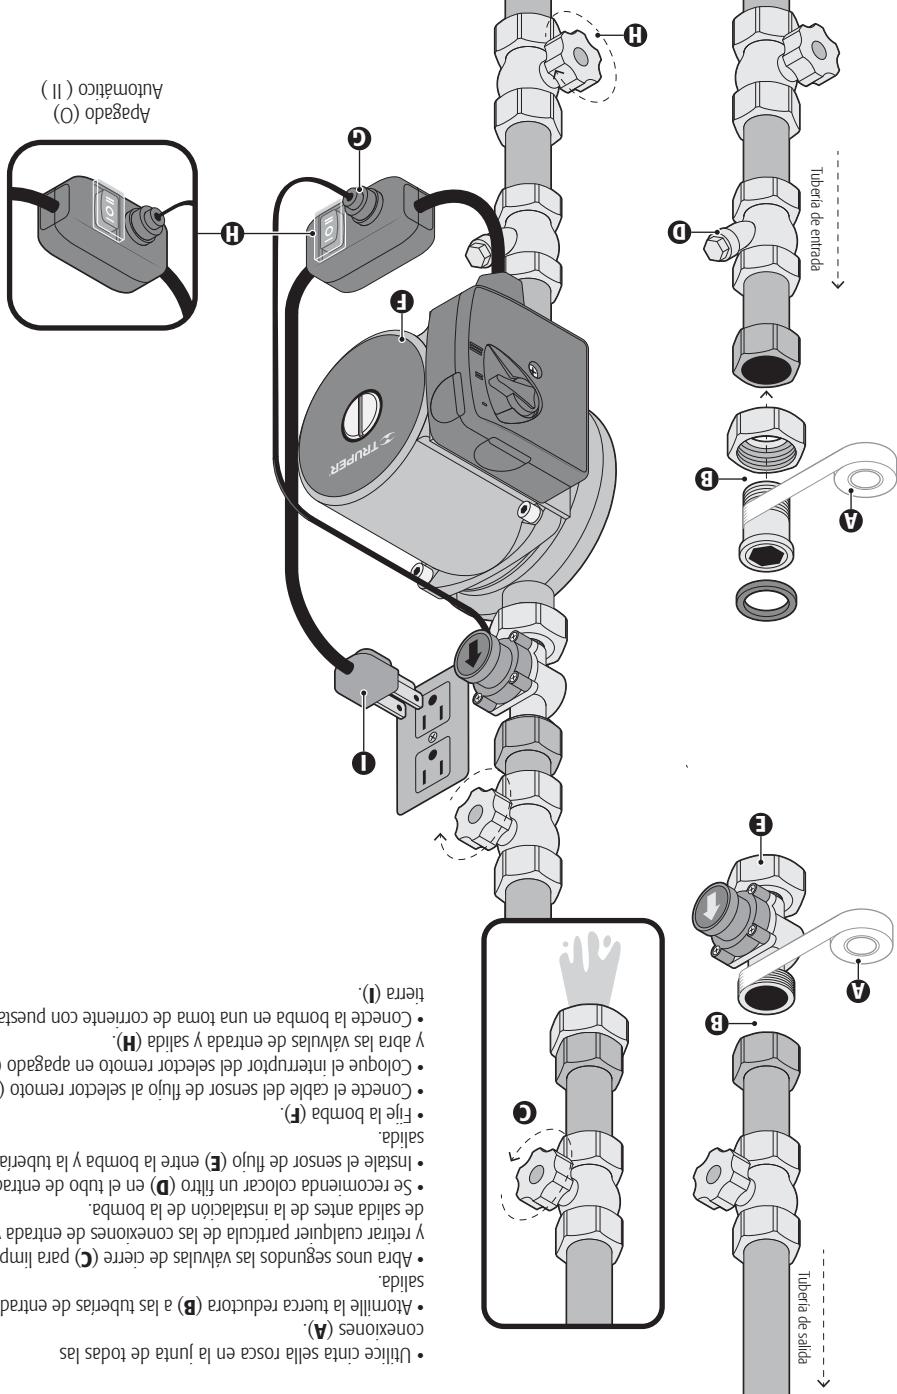


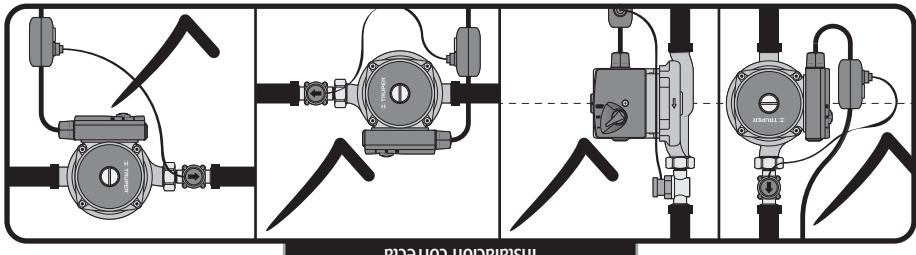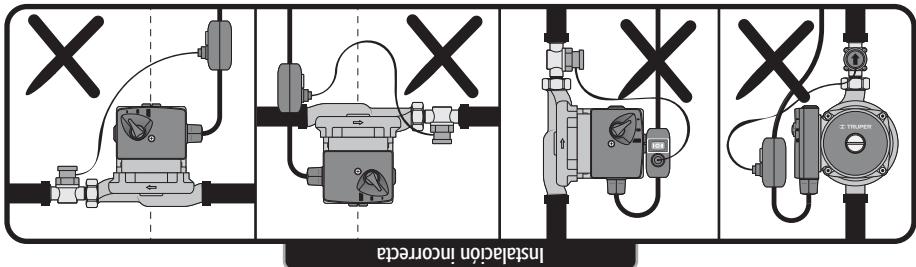

A ATENCIÓN • La dirección del flujo debe seguir la dirección de la flecha marcada en el cuerpo de la bomba.


Colocarla manteniendo siempre el eje del motor horizontal. Cuando instale la bomba no olvide

Instalación

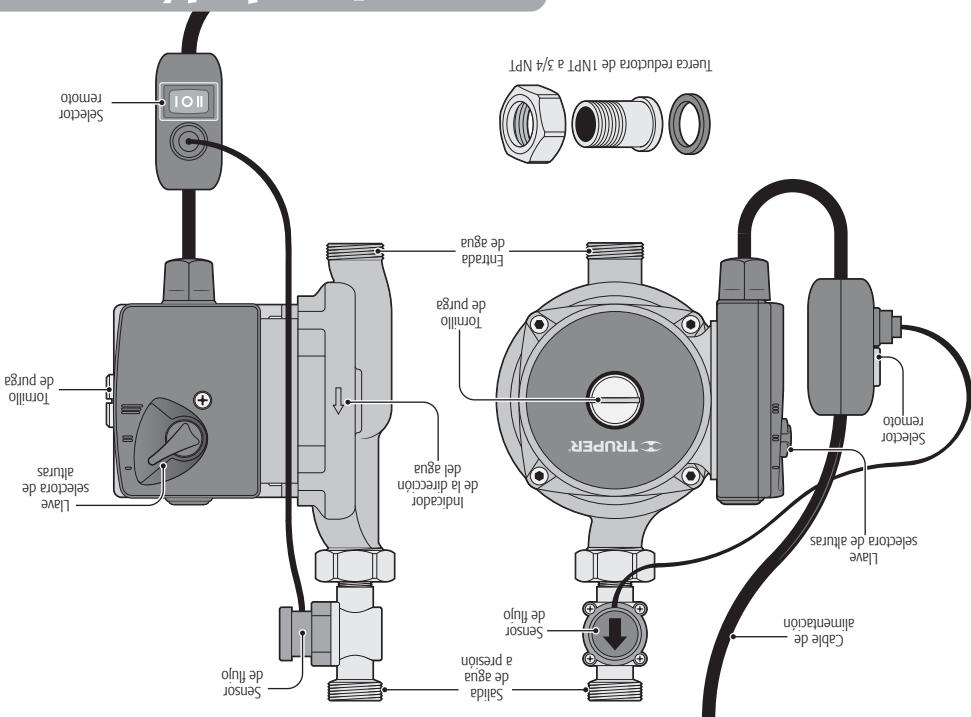

Partes

TRUPER®

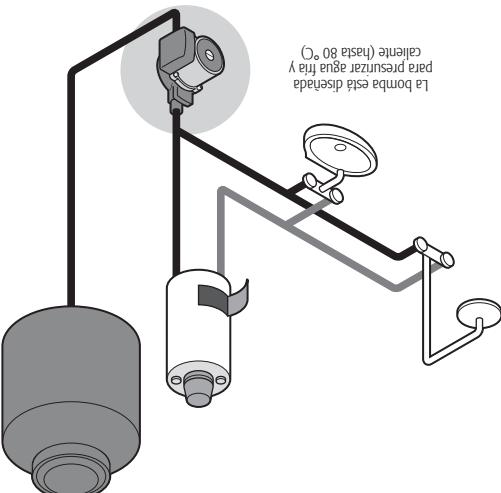

• La temperatura en el sistema no debe ser mayor que la temperatura ambiente para prevenir daño a los componentes.

• En caso de que la bomba no sea utilizada por períodos largos se debe de vaciarla de agua y protegerla de la humedad.

- Para facilitar el manejo independiente de recomendadas instalar un sistema de válvulas que permiten la apertura y cierre de cada una de las tuberías.

ADVETENCIA • No permita que las partes eléctricas de la bomba estén en contacto con el agua.

ADVERTENCIA • No instala la bomba dentro del
cubierta que la proteja.

A D V E R T E N C I A La bomba de agua se instaló en un lugar seco y bien ventilado para evitar un corto circuito o descargas eléctricas, esto es de acuerdo con las instrucciones que el sistema de llaves se sitúe bien centrado y sin obstrucciones, esto es de acuerdo con las instrucciones que el sistema de llaves se sitúe bien centrado y sin obstrucciones, esto es de acuerdo con las instrucciones que el sistema de llaves se sitúe bien centrado y sin obstrucciones.

A TENCIÓN • Altas de instalación y bombas
de agua para sistemas de riego y suministro
de agua potable.

- Utiliza principalmente para presentar a un público doméstico que hace el calendario y para aquella gente que no sabe leer.
- Es una buena forma de mantenerse en contacto con las personas que viven lejos.

- La bomba presurizada automática tiene un silencioso motor eléctrico totalmente revestido con piezas giratorias que generan presión en tuberías domésticas de agua limpia. La bomba no se sobrecarga cuando se está llena

para uso de presurizadores de agua

NORMA OFICIAL MEXICANA NOM-001-SEDE-INSTALACIONES ELECTRICAS (UTILIZACION) con los códigos y ordenanzas locales. Debe emplear un electricista calificado.


ADVERTENCIA Todo el cableado, las conexiones eléctricas y la conexión a tierra del sistema deben cumplir con la marca **9VOLTECK**. Que son específicas para el uso en exteriores, utilice una extensión alargada marcada como "Uso exterior".

ADVERTENCIA Si usa herramientas eléctricas en exteriores, utilice una extensión alargada marcada como "Uso exterior".

de 0 hasta 10 A	18 AWG	16 AWG	14 AWG	12 AWG	10 AWG	8 AWG
de 10 A hasta 15 A	3 (uno a tierra)	16 AWG	14 AWG	12 AWG	10 AWG	8 AWG
de 15 A hasta 20 A	3 (uno a tierra)	16 AWG	14 AWG	12 AWG	10 AWG	8 AWG
de 18 m a 15 m	mayor de 15 m					

Calibre de extensión
Número de
Amperes
Cableado en

cable y de la capacidad de amperes indicada en la placa de datos de la herramienta. Si tiene dudas use el siguiente cuadro más abajo.

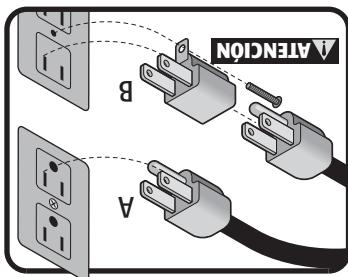

ADVERTENCIA Al usar un cable de extensión, asegúrese de usar el calibre suficiente para transportar la corriente que consumirá su herramienta. Un cable de menor diámetro que el de la herramienta puede causar una caída de voltaje importante.

ADVERTENCIA Siempre conecte la regla del conductor de tierra como se indica. Utilice un adaptador temporizador como se muestra en el NÚMERO MOTIVO. Utilice un adaptador temporizador como se muestra en el NÚMERO MOTIVO.

• Si el contacto de la placa es de 2 polos (2 alfiles),

seguir vertiente con un eléctrico trifásico.

• Conecte la clavija a uno de los contactos existentes alterizados, si no es así el ejemplo **A**. No todos los contactos debidamente alterizados como se muestra en la figura tienen los contactos debidamente alterizados, si no es así

• Conecte la clavija a la tercia minima debiendo ser conectada a la tercia minima existente en uso para evitar una descarga eléctrica.

ADVERTENCIA La herramienta debe ser conectada a la tercia minima existente en uso para evitar una descarga eléctrica.

Requerimientos eléctricos

ADVERTENCIA Antes de obtener acceso a las terminales, todos los circuitos de alimentación deben ser desconectados. No lo exponga a la lluvia, líquidos y/o humedad.

La construcción del aislamiento eléctrico es esta herramienta es alterada por salticuladores o derriamamiento de líquidos durante su operación. No lo exponga a la lluvia, líquidos y/o humedad.

AutORIZADO **C TRUPER**, con el fin de evitar algún riesgo de descarga eléctrica considerable.

ADVERTENCIA Si el cable de alimentación se daña, este debe ser reemplazado por el fabricante o Centro de Servicio

La clase de aislamiento térmico de los devanados del motor: Clase F.

La clase de construcción de la herramienta es: Aislamiento básico.

E) cable de alimentación tiene siguientes tipos:

• Clase I • Grado IP • Clase II • Aislamiento

Ciclo de trabajo • 50 min de trabajo por 20 min de descanso. Máximo 6 horas diarias.

Conductores • 20 AWG x 3C con temperatura de aislamiento de 105 °C

Presión máxima de entrada • 1,0 MPa (10 bar) • Temperatura máxima de líquido • 80 °C

Presión mínima de entrada • 0,005 MPa (0,05 bar) • Altura manométrica total • 12 m

Diametro de entrada y salida • 3/4" NPT

Potencia • 250 W (1/3 Hp)

Velocidad • 3 600 r/min


Corriente • 2 A

Frecuencia • 60 Hz

Tensión • 127 V ~

Descripción • Bomba Presurizada

Código • 14637

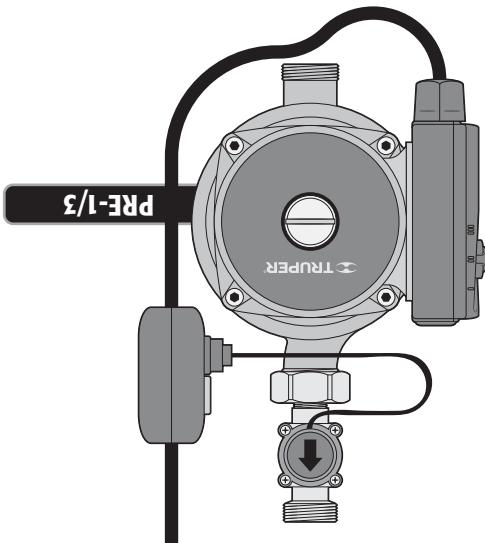

Para poder sacar el máximo provecho del equipo, alargar su vida útil, hacer valida la garantía en caso de ser necesario y evitar riesgos o lesiones graves, es fundamental leer este instructivo por completo antes de usar el equipo.

ATENCIÓN

Indice

Especificaciones técnicas	3
Requerimientos eléctricos	3
Advertencias generales de seguridad	4
Advertencias de seguridad para herramientas eléctricas	5
Partes	6
Instalación	6
Puesta en marcha	8
Mantenimiento	9
Solución de problemas	10
Notas	12
Centros de Servicio Autorizados	12
Poliza de Garantía	12




Lea este instructivo por completo
antes de usar la herramienta.

ATENCIÓN



PRE-1/3

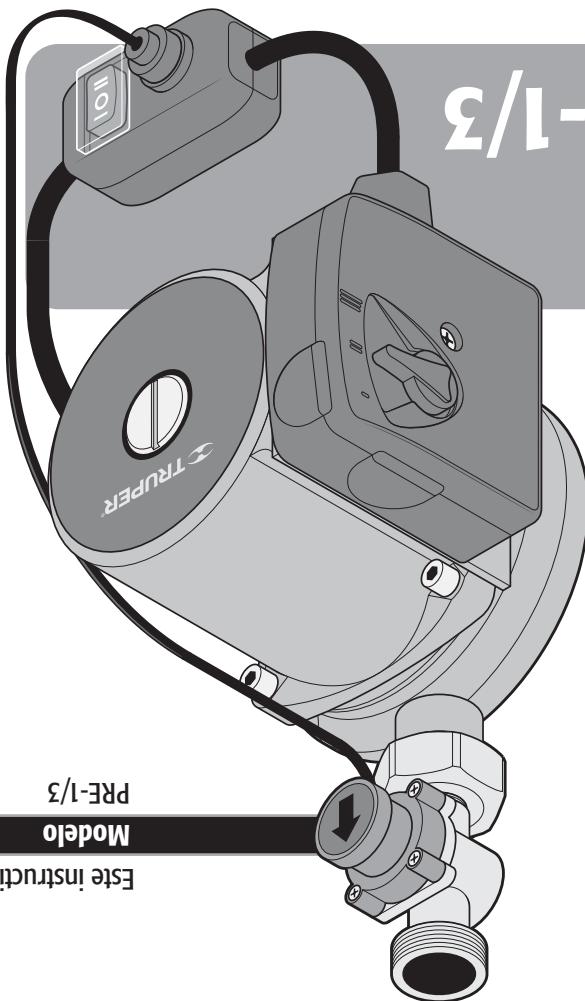

14637

PRE-1/3

Codigó

Modelo

Este instructivo es para:

Bomba presurizadora

Instructivo de

1/3 Hp
Potencia
250 W

TRUPER®

ESPAÑOL
ENGLISH